

ETCR3200 Double Clamp Earth Resistance Tester

Product Function

Precise 4-wire method, 3-wire method, simple 2-wire method, selection method and double clamp method earth resistance measurement, soil resistivity measurement, earth voltage measurement, grounding lead leakage current measurement, AC current measurement, DC resistance measurement.

Product features

- 1. Import FFT (fast fourier transform) technology, AFC (automatic frequency control) technology, with unique anti-interference ability and environment adaptability, with strong retest consistency.
- 2. The host equip with large LCD, with white backlight and bar graph indication which can reading clearly and obvious.
- 3. With Alarm and data storage function.
- 4. Data upload function, which can upload storage data to computer for saving and printing.







_				
IAC	hnica	I Sne	CITICS	ation

recinited openinedien				
2/3/4 -Wire Method Measure Earth Resistance (R) Selection Method Measure Earth Resistance (R) Double Clamp Method Measure Earth Resistance	Range: 0.00Ω~30.00Ω	Resolution: 0.01Ω	Accuracy: ±2%rdg±3dgt	
	Range: 30.0Ω~300.0Ω	Resolution: 0.1Ω	Accuracy: ±2%rdg±3dgt	
	Range: 300Ω~3000Ω	Resolution: 1Ω	Accuracy: ±2%rdg±3dgt	
	Range: 3.00kΩ~30kΩ	Resolution: 10Ω	Accuracy: ±4%rdg±3dgt	
	Range: 0.00Ω~30.00Ω	Resolution: 0.01Ω	Accuracy: ±2%rdg±3dgt	
	Range: 30.0Ω~300.0Ω	Resolution:0.1Ω	Accuracy: ±2%rdg±3dgt	
	Range: 300Ω~3000Ω	Resolution: 1Ω	Accuracy: ±2%rdg±3dgt	
	Range: 0.01Ω~0.99Ω	Resolution: 0.01Ω	Accuracy: ±10%rdg±5dgt	
	Range: 1.0Ω~29.9Ω	Resolution: 0.1Ω	Accuracy: ±10%rdg±5dgt	
(Re)	Range: 30Ω~100Ω	Resolution: 1Ω	Accuracy: ±10%rdg±5dgt	
Earth Voltage	Range: AC 0.0~100.0V	Resolution: 0.1V	Accuracy: ±2%rdg±3dgt	
AC Current	Range: 0.00mA~600.0A	Resolution: 0.00mA	Accuracy:±2%rdg±3dgt	
	Range:0.00Ωm~99.99Ωm	Resolution:0.01Ωm		
	Range:100.0Ωm~999.9Ωm	Resolution:0.1Ωm	According to the precision of R (ρ=2πaR, a:1 m-100m, π=3.14)	
Soil Resistivity (ρ)	Range:1000Ωm~9999Ωm	Resolution:1Ωm		
	Range:10.00kΩm~99.99kΩm	Resolution:10Ωm		
	Range:100.0kΩm~999.9kΩm	Resolution:100Ωm		
	Range:1000kΩm~9000kΩm	Resolution:1kΩm		
Measurement Method	2/3/4-wire method: change-pole method, measure current 20mA Max Selection method: change-pole method, measure current 20mA Max Double clamp method: Sensing measurement method, test current 1mA Max Soil Resistivity: 4-pole method(Wenner method) Voltage to earth: average rectification(between P(S)-ES) AC current: clamp sensor measurement			
Test Current	> 20mA (sine wave)	Open-Circuit Test Current	AC 40V max	
Data Storage	2000 groups	Test Voltage Wave	Sine wave	
Dead Hold	Data hold function: " HOLD " symbol display	Deta Access	Data access function: " READ " symbol display	
Overflow Display	Over range overflow function: " OL " symbol display	Test Frequency	128Hz/111Hz/105Hz/94Hz(AFC)	
Tester Dimension	215mm(L)X178mm(W)X83mm(H)			





Weight	5.8kg(include accessories and packing)		
Automatic Shutdown	15 minutes without any operation after starting up, the tester will shutdown automatically		
Electromagnetic Properties	IEC61326(EMC)		
LCD Dimension	128mmX75mm; LCD display area: 124mmX67mm		
Clamp Sensor	CT Size: φ50mm, clamp current sensor cable length: 2m		
Electrode Distance Range	Can be set 1m~100m		
Power Supply	DC 9V (Alkaline dry battery LR14 1.5VX6 PCS)		
Working Current	Standby: 45mA Max(Backlight off 25mA);Measurement:100mA Max(Backlight off)		
Test Line	Red 20m, black 20m, yellow 10m, green 10m, red 1.6m, black 1.6m (total 6PCS)		
Auxiliary Ground Stage	4PCS,φ9mm×230mm		
USB Interface	With USB interface, software monitoring, storage data can be uploaded to computer for saving and printing		
Interference Test	Automatic identify the interference signal, interference voltage higher than 5V will display "NOISE" symbol		
Auxiliary Earth Test	With auxiliary earth resistance test function: 0.00KΩ-30kΩ(100 R + rC <50kΩ, 100 R + rP <50kΩ)		
Alarm Function	When the measured value exceed alarm setting value, will have "Dududu" alarm sound		
Battery Voltage	While battery voltage drop to DC 7.5V, low battery voltage symbol will display, and remind to replace the battery		
Overload Protection	Measure earth resistance: between each interfaces of C(H)-E、P(S)-ES, AC 280V/3 seconds		
Accessories	Tester:1PCS; Clamp current sensor: 2 PCS; Ground stake: 4PCS; Test line: 6PCS; USB communication cable: 1PCS; Tool bag:1PCS		

